 


simfer

Instruction Manual **GB**

Manuel D'utilisation **SI**

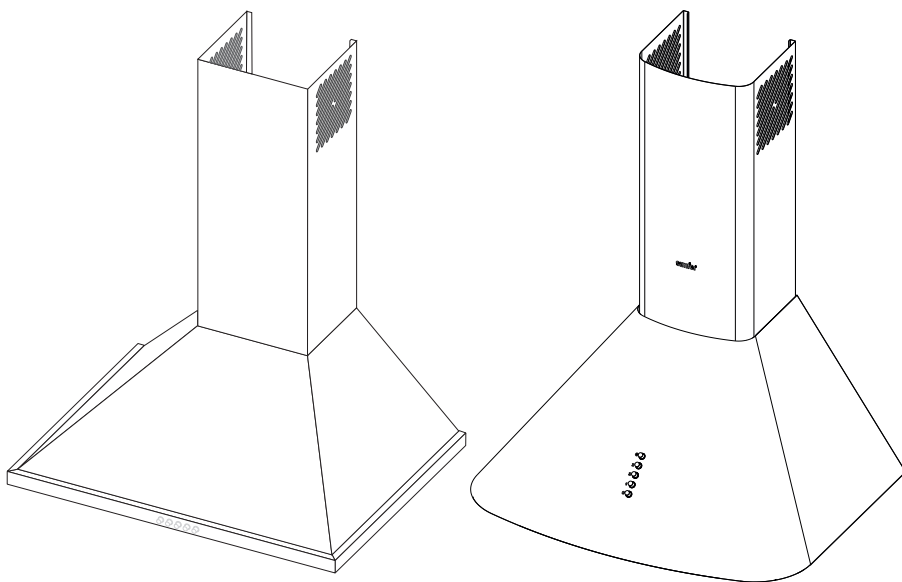

DECORATIVE CHIMNEY HOOD DEKORATIVNA KAMINSKA NAPA

www.simfer.com.tr

Dear Customer,

Thank you very much for your preference for Simfer products. Our objective is to ensure that you enjoy this product, manufactured environmentally-friendly with a total sense of quality in a precise working environment at our modern facilities, most efficiently.

We recommend you to read the instruction manual carefully and keep it handy before you use this Simfer chimney hood so that it maintains its quality just like the first day you bought it and serves you most efficiently.

NOTE:

 
This Instruction Manual has been prepared for a variety of models. Some of the features specified in the Manual may not exist in your device. These features are marked with *.

Our devices are designed for domestic use. They are not for professional use.

"PLEASE READ THE INSTRUCTIONS BEFORE YOU INSTALL OR USE THIS DEVICE."

This product has been manufactured in an environmentally-friendly and modern plants without harming the nature.

"Conforms with the EEE Regulations."



CONTENTS:

1.SAFETY INTRODUCTIONS.....	3
2. INTRODUCTION AND TECHNICAL DRAWING OF THE CHIMNEY HOOD...	4
3.INSTALLATION OF CHIMNEY HOOD.....	5
3.1.Location of the Chimney Hood.....	
3.2.Mounting Chimney Hood On The Wall.....	
3.3.Mounting the Aluminum Pipe	
3.4.Installation of Outer Duct.....	
3.5.Installation of Inner Duct Mounting Bracket	
4.FUNCTIONS OF THE CHIMNEY HOOD	7
4.1.Control Panel and its Functions.....	
4.2.Operating the Chimney Hood.....	
4.3.In ducted use.....	
4.4.Round Charcoal Filter.....	
4.5.Use of Charcoal Filter.....	
4.6.Installation of Charcoal Filter.....	
4.7.Use of Aluminum Cartridge Filter.....	
5.REPLACING THE BULB.....	9
5.1.Led.....	
5.2.Candle Type Halogen Bulb.....	
6.MAINTENANCE OF THE CHIMNEY HOOD.....	10
7.IF CHIMNEY HOOD DOES NOT WORK.....	11



1. SAFETY INSTRUCTIONS

 
- This product is designed for domestic use.
- Product Voltage is 220-240 Volts 50Hz.
- Power cord of your product is fitted with grounded plug. This cord must be plugged into a grounding socket.
- All electrical installation must be done by a qualified electrician.
- Installation by unqualified persons may lead the product run with lower performance, be damaged or cause accidents.
- Power supply cord should not be jammed or crushed. Power cord should not be close to hobs, etc, otherwise it may melt and cause fire.
- Do not plug in the product into a socket before the installation is complete.
- Make sure the mains switch is easily accessible in order to cut the power of the product in case of any danger.
- Do not touch the bulbs of your product if used for a long period of time. The bulbs will be hot and may burn your hand.
- Kitchen chimneys are designed for domestic use. If used for other purposes, it may lead to a failure and not be covered under the warranty.
- Follow the authorized agencies' rules and regulations regarding letting out the air. (This warning does not apply to usage with non-ducted chimney hoods.)
- Food that may burst into flames should not be cooked under the device.
- Turn on the product after you place pots, pans, etc on the hobs. Otherwise excess heat may cause deformation of some parts of your product.
- Do not leave hot oil on the hobs. Pans with hot oil inside may cause self-ignition.
- When cooking i.e. deep frying, hot oil may burst into flames. Be careful on your curtains and cloths.
- Make sure you replace the filters at the recommended intervals. Filters not replaced on time carry fire risk due to increase of grease on them.
- Do not use non-fire-resistant materials instead of filters.
- Keep the potentially dangerous packaging materials away from children.
- Do not use your product without a filter, do not remove filters when the product is operating.
- In case of start of flames, cut off the power of the chimney fan and cooker. (Cut off the power by unplugging the device).

1. SAFETY INSTRUCTIONS

- Turn off the hobs before you remove pots, pans, etc.
- If the cleaning is not done periodically, your product may carry fire risk.
- Cut off the power supply before any maintenance work. (Cut off the power by unplugging the device.)
- For duct-out chimney hoods, use pipes with a diameter of 150mm or 120mm. You should minimize the ducting distance with minimum bends.
- Make sure your children do not play with the product. Do not let young children operate the product.
- If the power cord is damaged, the damaged cord should be replaced by the manufacturer or its service agent or similarly specialized personnel in order to avoid a dangerous situation.
- In case of start of flames, cut off the power of the chimney fan and cooker and cover the flame. Do not use water to extinguish the fire.


Install "MAX 6 A" fuse for the extractor fan.

2. INTRODUCTION AND TECHNICAL DRAWING OF THE CHIMNEY HOOD

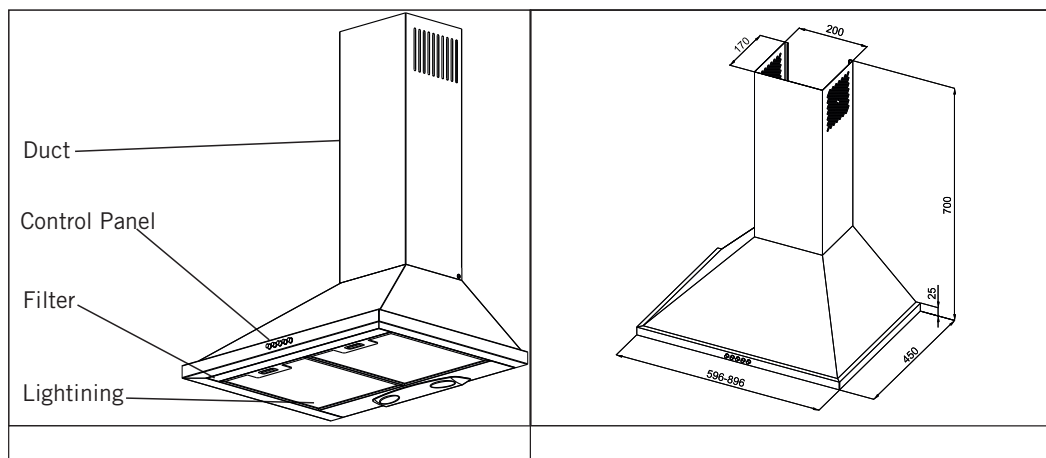


3.INSTALLATION OF CHIMNEY HOOD

 3.1.Location of the Chimney Hood

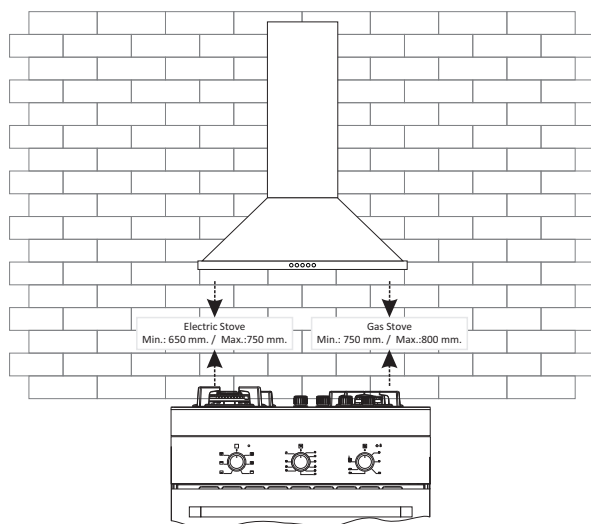

3.2.Mounting Chimney Hood On The Wall

 2 drywall (8mm) anchors are nailed into the holes drilled according to installation template **(A,B)**. They are fixed into the wall through 2 key holes by screws as shown in **Figure 2**.

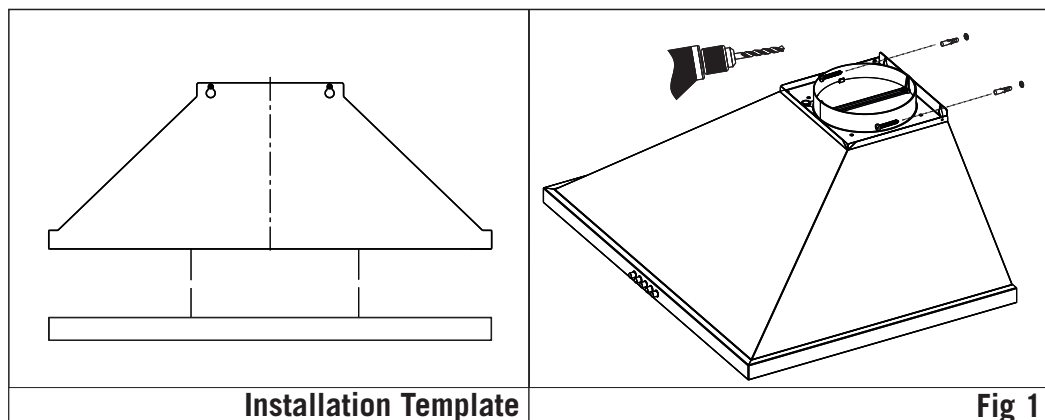

Installation Template


Fig 1

3.3.Mounting the Aluminum Pipe

Place the aluminum pipe on the plastic duct. Place the other end of the pipe into the air outlet in the kitchen. **Figure 2**

Twists and bends on the aluminum pipe may cause minimizing the air suction so avoid unnecessary bends and twists as much as possible. **Figure 3-4**

 Place the inner duct and outer duct carefully on the product. Fix the inner duct to inner duct connection plate with 2 screws.

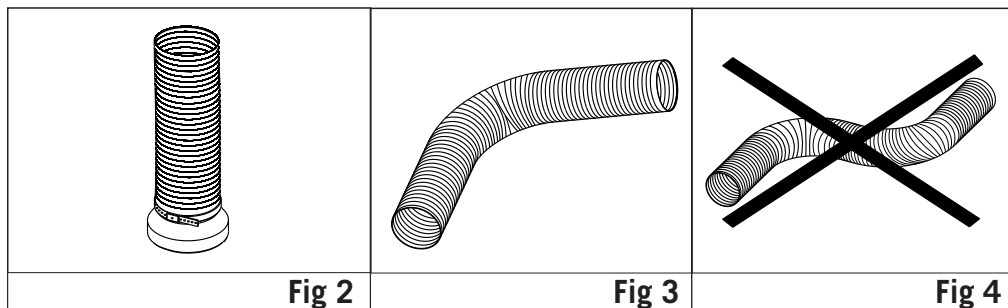

3.4.Installation of Outer Duct

 
Put the outer duct on the chimney hood and fix to it by 2 screws (**Figure 5**)

3.5.Installation of Inner Duct Mounting Bracket

2 fixing holes are drilled on the wall with Ø6mm electric drill at a suitable height and place to fix the inner duct hanger plate onto the wall. 6mm drywall anchors are nailed into those holes and inner duct mounting brackets are pinned down. (**Figure 6**)

At the last step of chimney hood installation, the inner duct is screwed on the inner duct mounting brackets.

NOTE: Packaging may not include inner duct according to model.

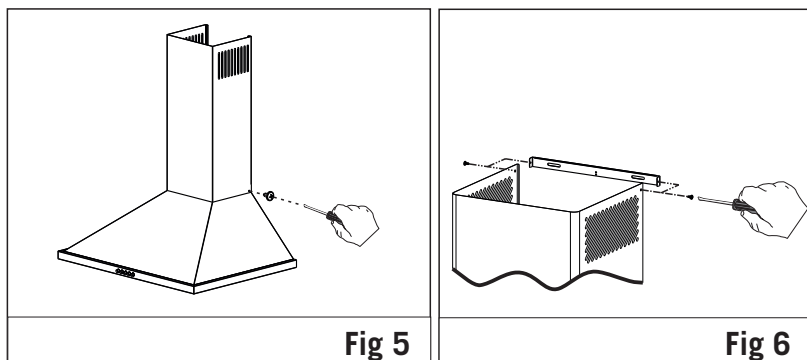


4. FUNCTIONS OF THE CHIMNEY HOOD

4.1. Control Panel

• Digital Control: touch the symbols on the keys. (On/Off function and timer are on the same key; if pressed for 1 sec on-off function will operate. If pressed for 3 sec. 15 minutes timer will operate.

 
NOTE: When the product operates for a certain time, the aluminum filters get dirty and the digital display shows "C" Clean sign. This means the filters should be cleaned. Press the speed reduction key for 5 secs in order to delete "C" sign from the display.



SYMBOLS	FUNCTIONS
---------	-----------

- | | |
|--|--|
| | • Switches on and off the motor. (Except for the lighting) If pressed for 3 sec. motor switch off itself after 15 minutes. |
| | • Decreases the speed when the motor is running. |
| | • Display |
| | • Increases the speed when the motor is running. |
| | • Only switches on and off the lighting system. |

 • Push Buton: Pressing the buttons will enable different functions. In order to disable them, press the button **OFF**.



SYMBOL	FUNCTIONS
--------	-----------

- | | |
|------------|--|
| OFF | • Stops the motor, except for the lighting system. |
| MIN | • Low speed |
| MID | • Medium speed |
| MAX | • Intense speed |
| | • It turns on and off the lighting system only. |

4.2. Operating the Chimney Hood

Extractor hood is used in ducted and non-ducted kitchens.

4.3. In ducted use;

In ducted use, extractor fan should be connected to an air outlet to send the air out. In order to use your extractor hood efficiently, make sure length of the pipe system between the extractor hood and the air outlet should be short. Your product has been manufactured suitable for ducted and non-ducted use.

4.4. Round Charcoal Filter

In kitchens with no duct, a round charcoal filter should be reintroduced the clean air into the kitchen. You can obtain the round filter from your service or dealer.

4.5. Use of Charcoal Filter

- Our products allow the installation of charcoal filter
- Regardless of use of charcoal filters or not, grease filters should be installed on the product. Do not use your product without grease filter.
- Use of charcoal filter is as follows.
- Cut off the device power before replacing charcoal filter.
- Charcoal filter is used in the kitchens with no duct therefore should be replaced in every 3-5 months depending on the frequency of use.
- Charcoal filter should never be washed.

4.6. Installation of Charcoal Filter

- Charcoal filters are used in the kitchens with no duct.
- Charcoal filters are installed onto both sides of the fan as shown in by turning 10 degrees clock-wise. **Figure 7**
- When uninstalling, reverse the same procedure.

4.7. Use of Aluminum Cartridge Filter

- Aluminum cartridge filter holds dust and grease in the air. Extractor hood should never be used without aluminum cartridge filter. **Figure 8**

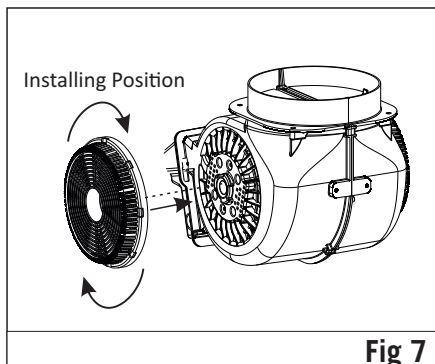 


Fig 7

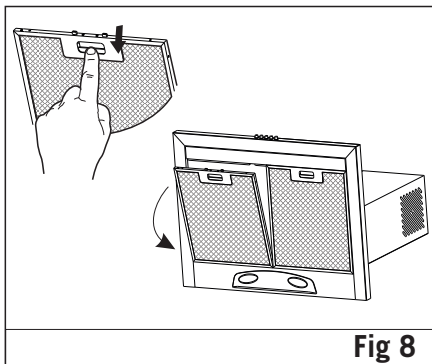 


Fig 8

5. REPLACING THE BULB

Always switch off the electrical supply before carrying out any operation.

5.1. LED

- LED bulb does not operate is possible to remove as shown in **Figure 9**
- A new bulb to be supplied from service points is replaced with the same reoperation.
- Cables are designed with sockets. The plug in should be made according to previous connection.

5.2. Candle Type Halogen Bulb

- Bulb does not operate is possible to remove as shown in.
- A new bulb with the same features is replaced with removed bulb.

Note: Remove the holder on the LED bulb. Put the new LED bulb on the holder housing of the LED bulb you removed as shown in Figure 10.

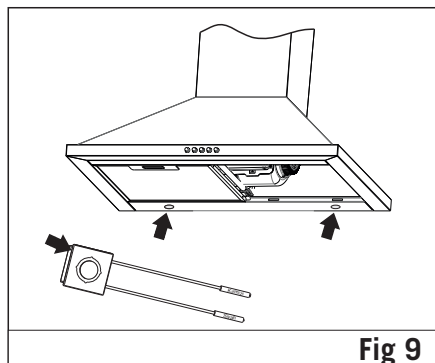 


Fig 9

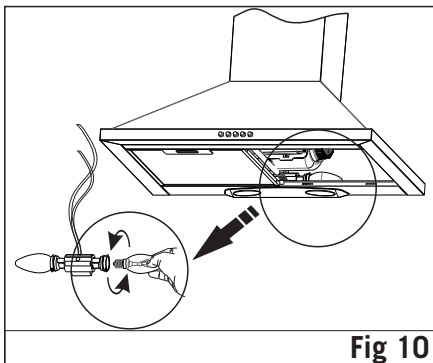 


Fig 10

6. MAINTENANCE OF THE CHIMNEY HOOD

- Device should be unplugged or switch should be turned off before cleaning and maintenance procedures.
- Metal filter should be cleaned once a month with hot soapy water or in the dishwasher, if possible. (60 °C)
- Remove the aluminum cartridge filter by pressing on the spring catches on the side. Do not refit before drying after wash.
- Outer surface of the extractor hood should be wiped with a damp cloth soaked with soapy water.
- Make sure electronic parts do not contact with water or similar materials.
- For inox products, using inox cleaning and maintenance products available in the market will provide longer usage life for your device.
- Aluminum filters can be washed in dishwasher. After several washes, aluminum filters may change colour. This is normal and filters do not need to be replaced.

WARNING

When used with devices which use fuel (heaters working with gas, diesel fuel, coal or firewood, water heaters, etc) and the air in the environment; should be used cautiously. The chimney hood sending the air out in the environment may affect the burning adversely.

This warning is not applicable to non-ducted use.

Efficient use of Chimney Hood

- When installing the chimney hood to the air duct, use 150/120 mm diameter pipes and use bends as minimum as possible.
- Be ware of cleaning periods of metal filters and replacing times of charcoal filters.
- When dense suction power is not required, use the product in medium setting.
- For right ventilation, the windows in the kitchen leading to the outside should be kept closed.

7.IF CHIMNEY HOOD DOES NOT WORK

Before contacting the service, make sure the product is plugged and the fuse in the electrical installation is working. Do not do anything that may harm the product.

Service and spare parts:

Have one of our authorized services install your device free of charge.

You can supply spare parts of your device from your dealer or authorized services.

The package includes a list of authorized services with the product.

When you contact your service or dealer to ask for any spare parts, notify them of product model name shown in the product label. When you remove the aluminum cartridge filter, you will see the product label.

Before contacting your service, check your chimney hood against the table below. If problem persists, contact your dealer or authorized service point.

	Check electricity connection (mains voltage should be 220-240 V, Chimney hood should be connected to grounding socket.)	Check motor switch (Motor switch should be on.)	Check bulb switch (Bulb switch should be on.)	Check aluminum filter (Aluminum cartridge filter should be washed once a month in normal use.)	Check bulbs (Bulbs should be in working condition.)	Check air outlet shaft (Air outlet shaft should be unblocked.)	Check charcoal filter (Charcoal filters should be replaced quarterly in normal use.)
Chimney Hood does not work	X	X					
Light bulb is not working	X		X		X		
Chimney hood air suction is poor				X		X	X
Do not send air out (in non-ducted cases)				X			X

Spoštovani uporabnik!

Veseli nas, da ste izbrali izdelke Simfer. Želimo si, da bi izdelek, ki smo ga izdelali na okolju prijazen način in upoštevanju kakovosti v natančno nadzorovanem delovnem okolju v našem sodobnem obratu, uporabljali čim bolj učinkovito in z veseljem.

Svetujemo vam, da pred uporabo nape Simfer natančno preberete navodila za uporabo in jih shranite na priročnem mestu ter ohranjate njegovo izvirno kakovost in ga čim učinkoviteje uporabljate.

OPOMBA:

navodila za uporabo so pripravljena za različne modele. Nekatere lastnosti, navedene v navodilih, morda ne veljajo za vašo napravo. Te lastnosti so označene s simbolom *.

Naše naprave so zasnovane za domačo uporabo in niso namenjene profesionalni uporabi.

»PRED NAMESTITVIJO ALI UPORABO NAPRAVE PREBERITE TA NAVODILA ZA UPORABO.«

Izdelek je bil izdelan v okolju prijaznem in sodobnem obratu brez vpliva na okolje.

»Skladnost z uredbami o električni in elektronski opremi (EEE).«

VSEBINA:

1. VARNOSTNA OPOZORILA.....	14
2. PREDSTAVITEV IN TEHNIČNA SKICA NAPE.....	15
3. NAMESTITEV NAPE.....	16
3.1. Mesto Namestitve Nape.....	
3.2. Pritrditev namestitvenega okvirja na napo.....	
3.3. Namestitev stenskega namestitvenega okvirja.....	
3.4. Namestitev okvirja notranje cevi.....	
3.5. Namestitev namestitvenega okvirja notranje cevi.....	
4. LASTNOSTI NAPE.....	18
4.1. Funkcije nadzorne plošče.....	
4.2. Uporaba nape.....	
4.3. Uporaba z zračnikom.....	
4.4. Okrogli ogljeni filter.....	
4.5. Uporaba oglenega filtra.....	
4.6. Namestitev oglenega filtra.....	
4.7. Uporaba aluminijastega kasetnega filtra.....	
5. MENJAVANJE SIJALKE.....	20
5.1. LED-sijalka.....	
5.2. Svečasta halogenska sijalka.....	
6. VZDRŽEVANJE NAPE.....	21
7. ODPRAVLJANJE NAPAK V DELOVANJU NAPE.....	22

1. VARNOSTNA NAVODILA

 
- Ta naprava je zasnovana za domačo uporabo.
- Izdelek je primeren za delovanje pri napetosti 220–240 V pri frekvenci 50 Hz.
- Napajalnik naprave je opremljen z ozemljenim vtičem. Napajalnik vključite v ozemljeno vtičnico.
- Električno namestitev mora izvesti usposobljen električar.
- Če namestitev izvede neusposobljena oseba, lahko pride do zmanjšane učinkovitosti delovanja naprave, poškodbe naprave ali nesreče pri njeni uporabi.
- Napajalni kabli ne smejo biti zagozdeni ali stisnjeni. Napajalnega kabla ne približujte grelnim ploščam/gorilnikom itd., saj se lahko stopijo in povzročijo požar.
- Naprave ne vključite v vtičnico, preden do konca ne izvedete namestitve.
- Zagotovite, da je omrežno stikalo lahko dostopno, da lahko v primeru nevarnosti hitro prekinete napajanje naprave.
- Ne prijemajte sijalk naprave ob njeni dolgotrajnejši uporabi, saj so vroče, zaradi česa lahko dobite opekline.
- Kuhinjske nape so zasnovane za domačo uporabo. Ob nenamenski uporabi nap lahko pride do okvare in posledične razveljavitve garancije.
- Glede odvajanja zraka upoštevajte pravila in predpise pooblaščenih agencij. (To opozorilo ne velja za uporabo nape brez zračnika.)
- Pod napo ne pripravljajte hrane, ki lahko zagori.
- Napravo vklopите šele, ko na grelno ploščo/gorilnike namestite posode, ponve itd. V nasprotnem primeru lahko prekomerna toplota povzroči deformacijo nekaterih delov naprave.
- Na grelni plošči/gorilnikih ne puščajte vročega olja. Vroče olje v ponvi lahko spontano zagori.
- Med kuhanjem, zlasti cvrtjem, lahko vroče olje zagori. Zaščitite zavese in oblačila.
- Filtre menjajte v priporočenih intervalih. Filtre, ki jih ne menjate pravočasno, vključujejo tveganje požara zaradi kopičenja maščobe.
- Filtrov ne nadomeščajte z materiali, ki niso odporni proti požaru.
- Potencialno škodljivo embalažo shranite zunaj dosega otrok.

1. VARNOSTNA NAVODILA

- Naprave ne uporabljajte brez nameščenega filtra in filtrov ne odstranjujte med delovanjem naprave.
- V primeru zanetenja ognja prekinite napajanje nape in kuhalnika. (Izključite napravo s prekinitvijo napajanja.)
- Grelno ploščo/gorilnike pred odstranjevanjem posod, ponev itd. izklopite.
- Če čiščenja ne izvajate redno, lahko naprava vključuje nevarnost požarov.
- Pred vzdrževanjem izključite napajanje. (Izključite napravo s prekinitvijo napajanja.)
- Za nape z zračnikom uporabite cevi s premerom od 120 do 150 mm. Dolžino zračnika zmanjšajte tako, da vsebuje čim manj zavojev.
- Otrokom preprečite igranje z napravo. Majhnim otrokom preprečite uporabo naprave.
- Če je napajalni kabel poškodovan, ga mora za preprečitev nevarnosti zamenjati proizvajalec ali njegov servisni zastopnik ali podobno usposobljena oseba.
- V primeru zanetenja ognja prekinite napajanje nape in kuhalnika ter plamene pokrijte s posodo. Požara ne gasite z vodo.


Za odvodni ventilator namestite varovalko z največjo močjo 6 A.

2. PREDSTAVITEV IN TEHNIČNA SKICA NAPE

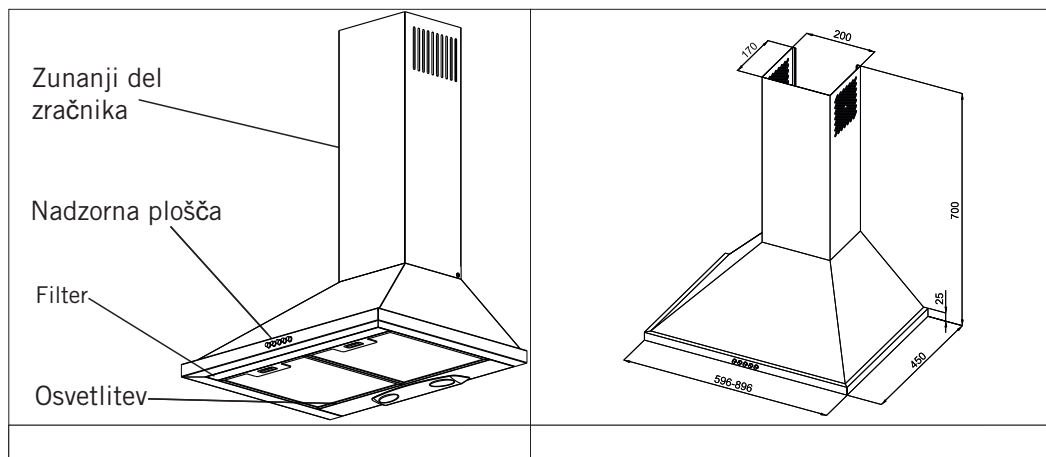

3. NAMESTITEV NAPE

 3.1. MESTO NAMESTITVE NAPE

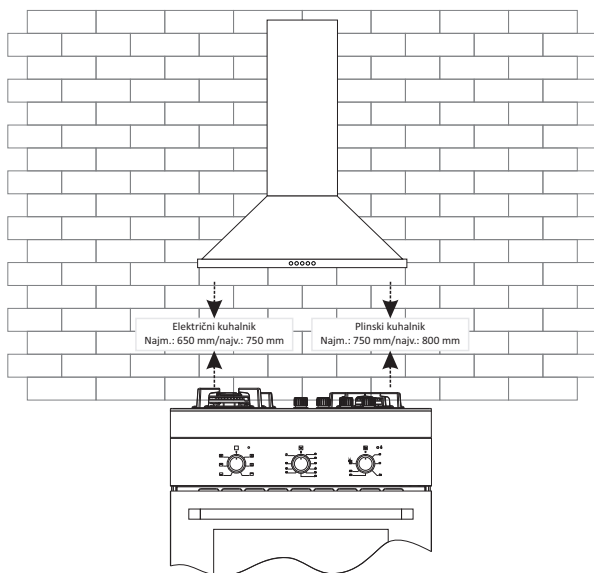


3.2. Pritrditev Namestitvenega Okvirja na Napo

Dva (2) namestitvena okvirja, ki sta na voljo med dodatki za namestitev, pritrdite na napo z enim vijakom z matico tako, kot je prikazano **na sliki 1**. Zagotovite, da namestitvena okvirja vstavite v ohišje motorja.


3.3 Nameš anje Aluminijaste Cevi

Aluminijasto cev namestite na plasti ni zra nik. Drugi konec cevi vstavite v odprtino za odvod zraka v kuhinji. **Slika 2**

 Zavoji in ukrivljenost aluminijaste cevi lahko vpliva na slabše odsesavanje zraka, zato se jim pri namestitvi v im ve ji meri izogibajte. **Slika 3–4**

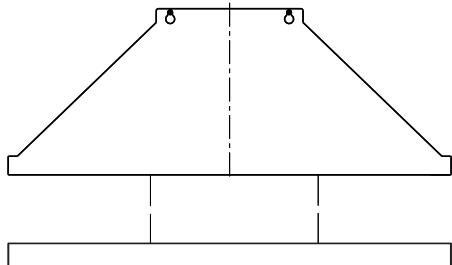


Namestitvena shema

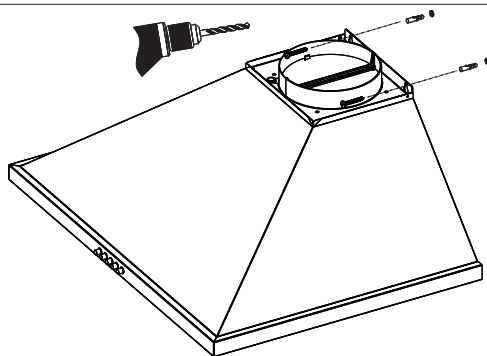 

Slika 1

 Notranji in zunanji del zračnika previdno namestite na izdelek. Notranji del zračnika z dvema vijakoma namestite na notranjo ploščo za namestitev zračnika.

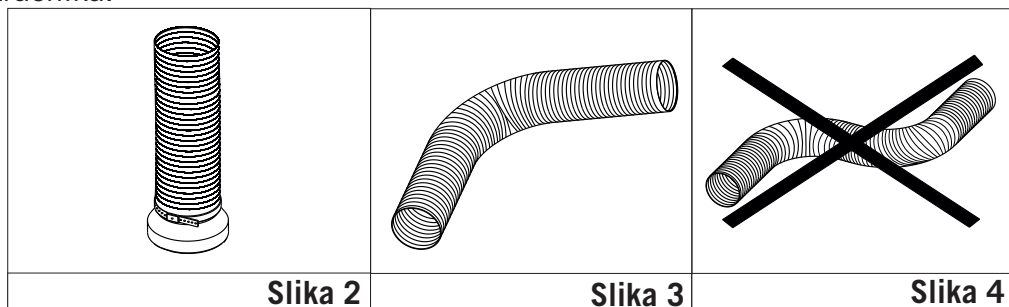

3.4. Nameščanje Zunanjega Dela Zračnika

 
Zunanji del zračnika namestite na napo in ga pritrdite z dvema vijakoma (Slika 5).

3.5 Namestitev Namestitvenega Okvirja Notranje Cevi

V steno z električnim vrtalnikom s svedrom premera 6 mm izvrtajte dve pritrdilni odprtini na ustrezni višini in okvir pritrdite, da boste lahko nanj namestili ploščo za notranji del zračnika. Sidrne vijake za 6-milimetrske mavčne stene v te izvrtine, da pritrdite namestitvene okvirje. (Slika 6)

V zadnjem koraku namestitve nape notranji zračnik privijte na namestitveni okvir.


OPOMBA: V obsegu dobave pri posameznih modelih notranji del zračnika morda ni vključen.

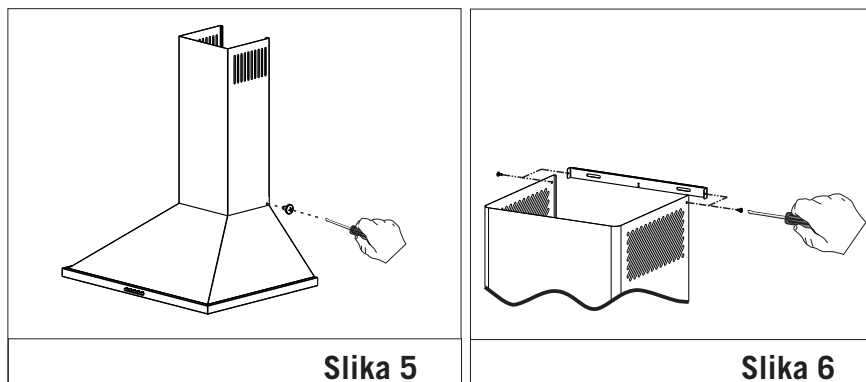

4. FUNKCIJE KAMINSKE NAPE

4.1. Nadzorna Plošča

 - **Nadzor na dotik:** dotaknite se simbolov na stekleni površini. S pridržanjem simbola (dlje kot 3 sekunde) lahko vklopite več funkcij.
- **Digitalni nadzor:** dotaknite se simbolov na tipkah. Funkciji za vklop/izklop in časovnik so na isti tipki; če tipko pritisnete in jo držite 1 sekundo, se bo vklopila funkcija za vklop/izklop. Če jo pritisnete in držite 3 sekunde, se bo vklopil 15-minutni časovnik.




SIMBOLI FUNKCIJE

- | | |
|--|--|
| | • Vklop in izklop motorja. (ne vpliva na osvetlitev) |
| | • Znižanje hitrosti ob delovanju motorja. |
| | • Zaslon |
| | • Zvišanje hitrosti ob delovanju motorja. |
| | • Če pritisnete ta simbol, se motor samodejno izklopi po 15 minutah. |
| | • Vklop in izklop sistema osvetlitve. |

Opomba: Po določenem času delovanja nape se aluminijasti filtri zamašijo in na zaslonu se prikaže znak »C« za čiščenje. To pomeni, da je treba filtre očistiti. Pritisnite tipko za zmanjšanje hitrosti in jo držite 5 sekund, če želite izbrisati znak »C« na zaslonu.



 
- **Gumb:** S pritiskom gumbov omogočite številne funkcije. Če jih želite onemogočiti, pritisnite samo gumb OFF.



SIMBOLI FUNKCIJE

- | | |
|------------|---|
| OFF | • Zaustavitev motorja, ne vpliva na osvetlitev. |
| MIN | • Nizka hitrost |
| MID | • Srednja hitrost |
| MAX | • Visoka hitrost |
| | • Vklop samo sistema osvetlitve. |

   - **Potisni/vrtljivi gumb:** Če je gumb v odprtini, pomeni, da je sistem osvetlitve izklopljen. Ko pritisnete gumb, se ta izvleče in pomeni, da je sistem osvetlitve vklopljen. Če je gumb v položaju »0«, motor ne bo deloval. Če obrnete gumb v desno, zvišate hitrost motorja. Če obrnete gumb v levo, znižate hitrost motorja.

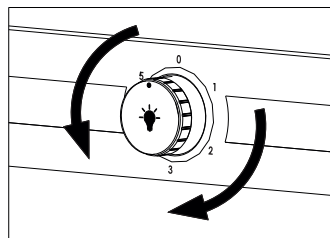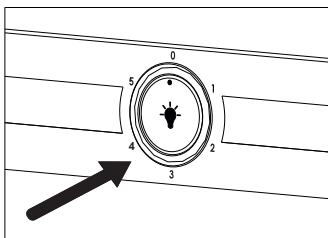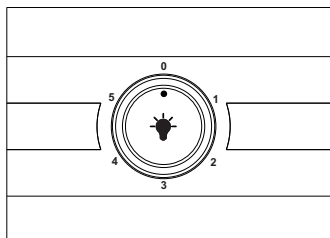

4.2. Uporaba Nape

Napa se uporablja v kuhinjah z zračnikom in brez njega.

4.3 Uporaba v Kuhinjah z Zračnikom

V kuhinjah z zračnikom je treba odvodni ventilator namestiti na odprtino za odvod zraka, ki bo odvajala zrak. Za učinkovito uporabo nape poskrbite, da bo dolžina cevne sistema med napo in odprtino za odvod zraka kratka. Naprava je bila izdelana tako, da je primerna za uporabo v kuhinjah z zračnikom ali brez.

4.4. Okrogli Ogleni Filter

V kuhinjah brez zračnika je treba za zagotavljanje čistega zraka v kuhinji namestiti okrogli ogleni filter. Okrogli filter je mogoče kupiti pri servisnem zastopniku ali prodajalcu.

4.5. Uporaba Oglenege Filtra

 
- **Naše naprave omogočajo** namestitev oglenege filtra.
- Kljub uporabi oglenege filtra je treba na izdelek namestiti maščobni filter. Naprave ne uporabljajte brez nameščenega maščobnega filtra.
- Ogleni filter uporabljajte po naslednjem postopku:
- Pred namestitvijo filtra izklopite napajanje naprave.
- Ogleni filter se uporablja v kuhinjah brez zračnika, zato ga je glede na pogostost uporabe treba zamenjati po 3 do 5 mesecih.
- Oglenege filtra nikoli ne čistite z vodo.

4.6 Namestitev Oglenega Filtra


- Ogleni filtri se uporabljajo v kuhinjah brez zračnika.
- Ogljene filtre je treba namestiti na obeh straneh ventilatorja, kot je prikazano **na Sliki 7**, z obračanjem 10 stopinj v desno.
- Pri odstranitvi celoten postopek ponovite v obratnem vrstnem redu.

4.7 Uporaba aluminijastega kasetnega filtra

Aluminijasti kasetni filter zadržuje prah in maščobo iz zraka. Kaminske nape nikoli ne uporabljajte brez aluminijastega kasetnega filtra. **Slika 8**

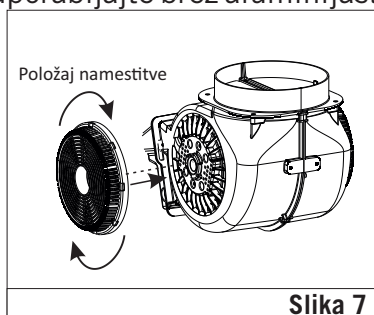

Slika 7

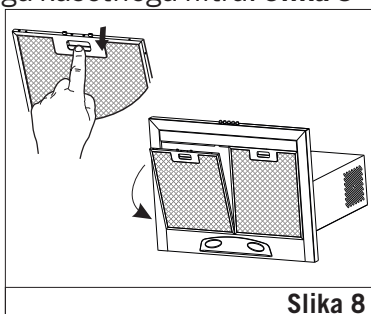 


Slika 8

5. MENJAVANJE SIJALKE


Pred izvajanjem postopkov napravo vedno izključite iz električnega napajanja.

5.1 LED-sijalka

 - Če LED-sijalka ne deluje, jo je mogoče odstraniti, kot je prikazano **na Sliki 9**
- V istem postopku jo zamenjajte z novo sijalko, ki jo je mogoče kupiti pri serviserju.
- Kabli so zasnovani s priključki. Priključitev je treba opraviti skladno s prejšnjo priključitvijo.

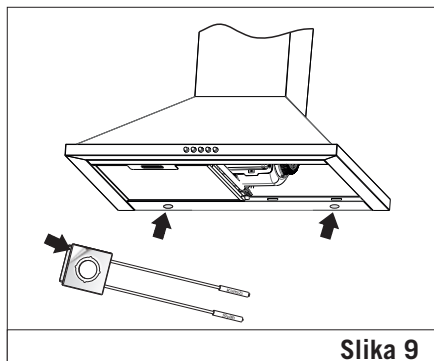

Slika 9

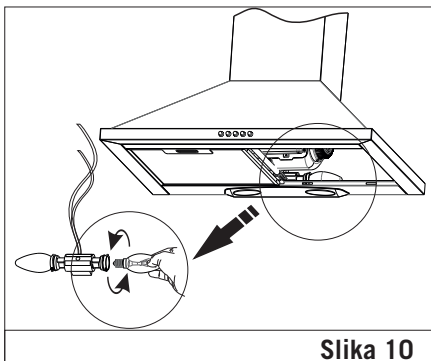 

Slika 10

5.2. Svečasta Halogenska Sijalka

- Če sijalka ne deluje, jo je mogoče odstraniti, kot je prikazano.
- Zamenjajte jo z novo sijalko z enakimi lastnostmi.

Opomba: Odstranite držalo LED-sijalke. Novo LED-sijalko namestite na ogrodje držala sijalke skladno s **Sliko 10**.

6. VZDRŽEVANJE NAPE

- Pred čiščenjem in vzdrževanjem je treba napravo izklopiti ali izključiti.
- Kovinski filter očistite enkrat mesečno z vročo milnico ali v pomivalnem stroju, če je mogoče (pri 60 °C).
- Aluminijski filter odstranite tako, da pritisnete vzmetne zaponke ob strani. Filtra ne namestite, dokler se ta ne posuši po čiščenju.
- Zunanjo površino nape čistite z vlažno krpo, namočeno v milnico.
- Poskrbite, da elektronski deli ne pridejo v stik z vodo ali podobnimi snovmi.
- Za izdelke iz nerjavnega jekla uporabite namenske izdelke za čiščenje in vzdrževanje, ki so na voljo na trgu in bodo zagotovili daljšo življenjsko dobo naprave.
- Aluminijske filtre je mogoče čistiti v pomivalnem stroju. Po večkratnem pranju lahko filtri spremenijo barvo. To je povsem običajno in jih ni treba zamenjati.

OPOZORILO

Previdno ravnajte pri uporabi z napravami na gorivo (grelniki na plin, dizelsko gorivo, premog ali drva, grelniki vode itd.) in zrak iz okolja. Napa, ki odvaja zrak v okolje, lahko neugodno vpliva na gorenje.

To opozorilo ne velja za nape, ki se uporabljajo v kuhinjah brez zračnika.

U inkovita izraba nape

- Pri namestitvi nape na zra nik uporabite cevi s premerom 150/120 mm in im manjšo ukrivljenostjo.
- Upoštevajte asovne razporede iš enja kovinskih filtrov in menjave oglenih filtrov.
- e ni zahtevana visoka mo izsesavanja, uporabite srednje nastavitve naprave.
- Za ustrezno prezra evanje morajo biti zunanja okna v kuhinji zaprta.

7. ODPRAVLJANJE NAPAK V DELOVANJU NAPE

Preden se obrnete na serviserja, se prepričajte, da je naprava vključena in da električna varovalka deluje. Ne izvajajte ukrepov, ki bi lahko poškodovali napravo.

Servis in nadomestni deli:

Eden od naših pooblaščenih serviserjev vam lahko brezplačno namesti napravo.

Nadomestne dele naprave je mogoče kupiti pri prodajalcu ali pri pooblaščenem serviserju.

Pri povpraševanju po morebitnih nadomestnih delih serviserja ali prodajalce obvestite o imenu modela naprave, ki ga najdete na oznaki izdelka. Ko odstranite aluminijasti kasetni filter, boste videli oznako izdelka.

Preden se obrnete na serviserja, preverite spodnjo preglednico. Če težave še vedno ne odpravite, se obrnite na prodajalca ali pooblaščenega serviserja.

	Preverite električno napajanje (napetost omrežja mora biti 220–240 V, napa pa priključena v ozemljeno vtičnico).	Preverite stikalo motorja (stikalo mora biti vklopljeno).	Preverite stikalo sijalke (stikalo mora biti vklopljeno).	Preverite aluminijasti filter (aluminijasti kasetni filter je treba ob običajni uporabi očistiti enkrat mesečno).	Preverite sijalke (sijalke morajo delovati).	Preverite odzračevalni jašek (jašek mora biti prehodan).	Preverite ogleni filter (oglene filtre je treba ob običajni uporabi menjati štirikrat letno).
Napaka v delovanju nape	X	X					
Sijalka ne deluje	X		X		X		
Napa ne izsesava zadostne količine zraka				X		X	X
Napa ne odvaja zraka (pri namestitvah brez zračnika)				X			X